



BROTHER

## Brother TZe232 Cinta Laminada Original de Etiquetas - Texto rojo sobre fondo blanco - Ancho 12mm x 8 metros

PRECIO CON IVA

**14,45 €**

PRECIO SIN IVA

**11,94 €**

Referencia	TZE232
MPN	MCH161330
EAN	4977766685245

### DESCRIPCIÓN

Brother TZe232 (TZ-232) cinta laminada original para imprimir etiquetas con una rotuladora electrónica.

Utilizable en las rotuladoras electrónicas que muestran el logotipo TZ y TZe. Utilizadas para un etiquetado general en superficies lisas y planas, crean etiquetas claramente legibles por mucho tiempo.

Las cintas laminadas están diseñadas para durar, incluso bajo condiciones extremas y son capaces de aguantar temperaturas extremas, luz solar, agua, sustancias químicas o la abrasión.

Hay muchas cintas laminadas disponibles en una gran variedad de colores y tamaños para usar la etiqueta más adecuada en cada ocasión.

Concentración de bisfenol A inferior al 0,02% en peso (en cumplimiento con la normativa vigente).

#### Características:

- Texto rojo sobre fondo blanco.
- Ancho de 12 mm.
- Longitud de 8 metros.

#### Adecuado para uso en las siguientes impresoras:

Brother P-touch 200 , Brother P-touch 1000 , Brother P-touch 1000BTS , Brother P-touch 1005 , Brother P-touch 1005BTS , Brother P-touch 1005F , Brother P-touch 1005FB , Brother P-touch 1010 , Brother P-touch 1010B , Brother P-touch 1010L , Brother P-touch 1010NB , Brother P-touch 1010R1 , Brother P-touch 1080 , Brother P-touch 1080BTS , Brother P-touch 1080SBTS , Brother P-touch 1090 , Brother P-touch 1090BK , Brother P-touch 1100SB , Brother P-touch 1100SBVP , Brother P-touch 1100ST , Brother P-touch 1130 , Brother P-touch 1150 , Brother P-touch 1150DX , Brother P-touch 1160 , Brother P-touch 1170 , Brother P-touch 1170S , Brother P-touch 1180 , Brother P-touch 1180HK , Brother P-touch 1190 , Brother P-touch 11Q , Brother P-touch 1200 , Brother P-touch 1230PC , Brother P-touch 1250 , Brother P-touch 1250CC , Brother P-touch 1250CCVP , Brother P-touch 1250J , Brother P-touch 1250LB , Brother P-touch 1250S , Brother P-touch 1250VP , Brother P-touch 1250VPS , Brother P-touch 1260VP , Brother P-touch 1280 , Brother P-touch

1280BTS , Brother P-touch 1280CB , Brother P-touch 1280DT , Brother P-touch 1280SR , Brother P-touch 1280VP , Brother P-touch 1280VPS , Brother P-touch 1290 , Brother P-touch 1290DT , Brother P-touch 1290SBVP , Brother P-touch 1290VP , Brother P-touch 1400 , Brother P-touch 1500PC , Brother P-touch 1600 , Brother P-touch 1650 , Brother P-touch 1750 , Brother P-touch 1760 , Brother P-touch 1800 Plus , Brother P-touch 1800E , Brother P-touch 1800ECC , Brother P-touch 1810 , Brother P-touch 1830 , Brother P-touch 1830SC , Brother P-touch 1830VP , Brother P-touch 1850 , Brother P-touch 1850CC , Brother P-touch 1850VP , Brother P-touch 1880 , Brother P-touch 1880CT , Brother P-touch 18R , Brother P-touch 18RKT , Brother P-touch 18RZ , Brother P-touch 1900 , Brother P-touch 1910 , Brother P-touch 1950 , Brother P-touch 1950VP , Brother P-touch 1960 , Brother P-touch 2030 , Brother P-touch 2030AD , Brother P-touch 2030VP , Brother P-touch 210 , Brother P-touch 210E , Brother P-touch 2100 , Brother P-touch 2100VP , Brother P-touch 2110 , Brother P-touch 220 , Brother P-touch 2300 , Brother P-touch 2310 , Brother P-touch 2400 , Brother P-touch 2400E , Brother P-touch 2400ECC , Brother P-touch 2420 , Brother P-touch 2420PC , Brother P-touch 2430PC , Brother P-touch 2450 , Brother P-touch 2450CC , Brother P-touch 2450DX , Brother P-touch 2460 , Brother P-touch 2470 , Brother P-touch 2480 , Brother P-touch 2500PC , Brother P-touch 2600 , Brother P-touch 2610 , Brother P-touch 2700 , Brother P-touch 2700VP , Brother P-touch 2710 , Brother P-touch 2730 , Brother P-touch 2730VP , Brother P-touch 300 , Brother P-touch 310 , Brother P-touch 340 , Brother P-touch 350 , Brother P-touch 3600 , Brother P-touch 500 , Brother P-touch 550A , Brother P-touch 7100 , Brother P-touch 7100VP , Brother P-touch 7500VP , Brother P-touch 7600VP , Brother P-touch 900 , Brother P-touch 900BTS , Brother P-touch 900F , Brother P-touch 9200DX , Brother P-touch 9200PC , Brother P-touch 9400 , Brother P-touch 9500 , Brother P-touch 9500PC , Brother P-touch 9600 , Brother P-touch 9700PC , Brother P-touch 9800PCN , Brother P-touch D200 , Brother P-touch D200BW , Brother P-touch D200BWVP , Brother P-touch D200KT , Brother P-touch D200VP , Brother P-touch D200WNVP , Brother P-touch D210 , Brother P-touch D210VP , Brother P-touch D400 , Brother P-touch D400AD , Brother P-touch D400VP , Brother P-touch D450 , Brother P-touch D450VP , Brother P-touch D600 , Brother P-touch D600VP , Brother P-touch D800W , Brother P-touch E100 , Brother P-touch E100VP , Brother P-touch E110 , Brother P-touch E110VP , Brother P-touch E300 , Brother P-touch E300VP , Brother P-touch E500 , Brother P-touch E500VP , Brother P-touch E550W , Brother P-touch E550WS , Brother P-touch E550WSP , Brother P-touch E550WVP , Brother P-touch E800W , Brother P-touch GL-100 , Brother P-touch GL-200 , Brother P-touch GL-200VP , Brother P-touch H100 , Brother P-touch H100LB , Brother P-touch H100R , Brother P-touch H101 , Brother P-touch H101TB , Brother P-touch H105 , Brother P-touch H105P , Brother P-touch H105WB , Brother P-touch H107B , Brother P-touch H108G , Brother P-touch H110 , Brother P-touch H110LB , Brother P-touch H200 , Brother P-touch H300 , Brother P-touch H300LI , Brother P-touch H500 , Brother P-touch H500LI , Brother P-touch H75 , Brother P-touch H75S , Brother P-touch P300 , Brother P-touch P300BT Cube , Brother P-touch P700 , Brother P-touch P710BT Cube , Brother P-touch P750TDI , Brother P-touch P750W , Brother P-touch P750WSP , Brother P-touch P750WVP , Brother P-touch P900 , Brother P-touch P900W , Brother P-touch P950NW , Brother P-touch RL-700S , Brother P-touch 1300 , Brother P-touch 1700 , Brother P-touch 170K , Brother P-touch 2200 , Brother P-touch 2210 , Brother P-touch 2300 , Brother P-touch 2310 , Brother P-touch 2410 , Brother P-touch 3000 , Brother P-touch 320 , Brother P-touch 330 , Brother P-touch 520 , Brother P-touch 530 , Brother P-touch 540 , Brother P-touch 540C , Brother P-touch 580C , Brother PT 200 , Brother PT 1000 , Brother PT 1000BTS , Brother PT 1005 , Brother PT 1005BTS , Brother PT 1005F , Brother PT 1005FB , Brother PT 1010 , Brother PT 1010B , Brother PT 1010L , Brother PT 1010NB , Brother PT 1010R1 , Brother PT 1080 , Brother PT 1080BTS , Brother PT 1080SBTS , Brother PT 1090 , Brother PT 1090BK , Brother PT 1100SB , Brother PT 1100SBVP , Brother PT 1100ST , Brother PT 1130 , Brother PT 1150 , Brother PT 1150DX , Brother PT 1160 , Brother PT 1170 , Brother PT 1170S , Brother PT 1180 , Brother PT 1180HK , Brother PT 1190 , Brother PT 11Q , Brother PT 1200 , Brother PT 1230PC , Brother PT 1250 , Brother PT 1250CC , Brother PT 1250CCVP , Brother PT 1250J , Brother PT 1250LB , Brother PT 1250S , Brother PT 1250VP , Brother PT 1250VPS , Brother PT 1260VP , Brother PT 1280 , Brother PT 1280BTS , Brother PT 1280CB , Brother PT 1280DT , Brother PT 1280SR , Brother PT 1280VP , Brother PT 1280VPS , Brother PT 1290 , Brother PT 1290DT , Brother PT 1290SBVP , Brother PT 1290VP , Brother PT 1400 , Brother PT 1500PC , Brother PT 1600 , Brother PT 1650 , Brother PT 1750 , Brother PT 1760 , Brother PT 1800 Plus , Brother PT 1800E , Brother PT 1800ECC , Brother PT 1810 , Brother PT 1830 , Brother PT 1830SC , Brother PT 1830VP , Brother PT 1850 , Brother PT 1850CC , Brother PT 1850VP , Brother PT 1880 , Brother PT 1880CT , Brother PT 18R , Brother PT 18RKT , Brother PT 18RZ , Brother PT 1900 , Brother PT 1910 , Brother PT 1950 , Brother PT 1950VP , Brother PT 1960 , Brother PT 2030 , Brother PT 2030AD ,

Brother PT 2030VP , Brother PT 210 , Brother PT 210E , Brother PT 2100 , Brother PT 2100VP , Brother PT 2110 , Brother PT 220 , Brother PT 2300 , Brother PT 2310 , Brother PT 2400 , Brother PT 2400E , Brother PT 2400ECC , Brother PT 2420 , Brother PT 2420PC , Brother PT 2430PC , Brother PT 2450 , Brother PT 2450CC , Brother PT 2450DX , Brother PT 2460 , Brother PT 2470 , Brother PT 2480 , Brother PT 2500PC , Brother PT 2600 , Brother PT 2610 , Brother PT 2700 , Brother PT 2700VP , Brother PT 2710 , Brother PT 2730 , Brother PT 2730VP , Brother PT 300 , Brother PT 310 , Brother PT 340 , Brother PT 350 , Brother PT 3600 , Brother PT 500 , Brother PT 550A , Brother PT 7100 , Brother PT 7100VP , Brother PT 7500VP , Brother PT 7600VP , Brother PT 900 , Brother PT 900BTS , Brother PT 900F , Brother PT 9200DX , Brother PT 9200PC , Brother PT 9400 , Brother PT 9500 , Brother PT 9500PC , Brother PT 9600 , Brother PT 9700PC , Brother PT 9800PCN , Brother PT D200 , Brother PT D200BW , Brother PT D200BWVP , Brother PT D200KT , Brother PT D200VP , Brother PT D200WNVP , Brother PT D210 , Brother PT D210VP , Brother PT D400 , Brother PT D400AD , Brother PT D400VP , Brother PT D450 , Brother PT D450VP , Brother PT D600 , Brother PT D600VP , Brother PT D800W , Brother PT E100 , Brother PT E100VP , Brother PT E110 , Brother PT E110VP , Brother PT E300 , Brother PT E300VP , Brother PT E500 , Brother PT E500VP , Brother PT E550W , Brother PT E550WS , Brother PT E550WSP , Brother PT E550WVP , Brother PT E800W , Brother PT GL-100 , Brother PT GL-200 , Brother PT GL-200VP , Brother PT H100 , Brother PT H100LB , Brother PT H100R , Brother PT H101 , Brother PT H101TB , Brother PT H105 , Brother PT H105P , Brother PT H105WB , Brother PT H107B , Brother PT H108G , Brother PT H110 , Brother PT H110LB , Brother PT H200 , Brother PT H300 , Brother PT H300LI , Brother PT H500 , Brother PT H500LI , Brother PT H75 , Brother PT H75S , Brother PT P300 , Brother PT P300BT Cube , Brother PT P700 , Brother PT P710BT Cube , Brother PT P750TDI , Brother PT P750W , Brother PT P750WSP , Brother PT P750WVP , Brother PT P900 , Brother PT P900W , Brother PT P950NW , Brother PT RL-700S , Brother PT 1300 , Brother PT 1700 , Brother PT 170K , Brother PT 2200 , Brother PT 2210 , Brother PT 2300 , Brother PT 2310 , Brother PT 2410 , Brother PT 3000 , Brother PT 320 , Brother PT 330 , Brother PT 520 , Brother PT 530 , Brother PT 540 , Brother PT 540C , Brother PT 580C

Rendimiento: Ancho 12mm / 8 metros

#### MODELOS y tipos de modelo:

[ **P-touch** ] 200, 1000, 1000BTS, 1005, 1005BTS, 1005F, 1005FB, 1010, 1010B, 1010L, 1010NB, 1010R1, 1080, 1080BTS, 1080SBTS, 1090, 1090BK, 1100SB, 1100SBVP, 1100ST, 1130, 1150, 1150DX, 1160, 1170, 1170S, 1180, 1180HK, 1190, 11Q, 1200, 1230PC, 1250, 1250CC, 1250CCVP, 1250J, 1250LB, 1250S, 1250VP, 1250VPS, 1260VP, 1280, 1280BTS, 1280CB, 1280DT, 1280SR, 1280VP, 1280VPS, 1290, 1290DT, 1290SBVP, 1290VP, 1400, 1500PC, 1600, 1650, 1750, 1760, 1800 Plus, 1800E, 1800ECC, 1810, 1830, 1830SC, 1830VP, 1850, 1850CC, 1850VP, 1880, 1880CT, 18R, 18RKT, 18RZ, 1900, 1910, 1950, 1950VP, 1960, 2030, 2030AD, 2030VP, 210, 210E, 2100, 2100VP, 2110, 220, 2300, 2310, 2400, 2400E, 2400ECC, 2420, 2420PC, 2430PC, 2450, 2450CC, 2450DX, 2460, 2470, 2480, 2500PC, 2600, 2610, 2700, 2700VP, 2710, 2730, 2730VP, 300, 310, 340, 350, 3600, 500, 550A, 7100, 7100VP, 7500VP, 7600VP, 900, 900BTS, 900F, 9200DX, 9200PC, 9400, 9500, 9500PC, 9600, 9700PC, 9800PCN, D200, D200BW, D200BWVP, D200KT, D200VP, D200WNVP, D210, D210VP, D400, D400AD, D400VP, D450, D450VP, D600, D600VP, D800W, E100, E100VP, E110, E110VP, E300, E300VP, E500, E500VP, E550W, E550WS, E550WSP, E550WVP, E800W, GL-100, GL-200, GL-200VP, H100, H100LB, H100R, H101, H101TB, H105, H105P, H105WB, H107B, H108G, H110, H110LB, H200, H300, H300LI, H500, H500LI, H75, H75S, P300, P300BT Cube, P700, P710BT Cube, P750TDI, P750W, P750WSP, P750WVP, P900, P900W, P950NW, RL-700S, 1300, 1700, 170K, 2200, 2210, 2300, 2310, 2410, 3000, 320, 330, 520, 530, 540, 540C, 580C

[ **PT** ] 200, 1000, 1000BTS, 1005, 1005BTS, 1005F, 1005FB, 1010, 1010B, 1010L, 1010NB, 1010R1, 1080, 1080BTS, 1080SBTS, 1090, 1090BK, 1100SB, 1100SBVP, 1100ST, 1130, 1150, 1150DX, 1160, 1170, 1170S, 1180, 1180HK, 1190, 11Q, 1200, 1230PC, 1250, 1250CC, 1250CCVP, 1250J, 1250LB, 1250S, 1250VP, 1250VPS, 1260VP, 1280, 1280BTS, 1280CB, 1280DT, 1280SR, 1280VP, 1280VPS, 1290, 1290DT, 1290SBVP, 1290VP, 1400, 1500PC, 1600, 1650, 1750, 1760, 1800 Plus, 1800E, 1800ECC, 1810, 1830, 1830SC, 1830VP, 1850, 1850CC, 1850VP, 1880, 1880CT,

18R, 18RKT, 18RZ, 1900, 1910, 1950, 1950VP, 1960, 2030, 2030AD, 2030VP, 210, 210E, 2100, 2100VP, 2110, 220, 2300, 2310, 2400, 2400E, 2400ECC, 2420, 2420PC, 2430PC, 2450, 2450CC, 2450DX, 2460, 2470, 2480, 2500PC, 2600, 2610, 2700, 2700VP, 2710, 2730, 2730VP, 300, 310, 340, 350, 3600, 500, 550A, 7100, 7100VP, 7500VP, 7600VP, 900, 900BTS, 900F, 9200DX, 9200PC, 9400, 9500, 9500PC, 9600, 9700PC, 9800PCN, D200, D200BW, D200BWVP, D200KT, D200VP, D200WNVP, D210, D210VP, D400, D400AD, D400VP, D450, D450VP, D600, D600VP, D800W, E100, E100VP, E110, E110VP, E300, E300VP, E500, E500VP, E550W, E550WS, E550WSP, E550WVP, E800W, GL-100, GL-200, GL-200VP, H100, H100LB, H100R, H101, H101TB, H105, H105P, H105WB, H107B, H108G, H110, H110LB, H200, H300, H300LI, H500, H500LI, H75, H75S, P300, P300BT Cube, P700, P710BT Cube, P750TDI, P750W, P750WSP, P750WVP, P900, P900W, P950NW, RL-700S, 1300, 1700, 170K, 2200, 2210, 2300, 2310, 2410, 3000, 320, 330, 520, 530, 540, 540C, 580C

**■ PRECIOS POR CANTIDAD**

A partir de (uds.)	Precio sin IVA	Precio con IVA
2	11,58 €	14,01 €
3	11,34 €	13,72 €
4	11,10 €	13,43 €
5	10,75 €	13,01 €

*Precios unitarios. El descuento se aplica al alcanzar la cantidad indicada.*